

workHero

10L Dry Canister

Ideal for:

- Motels / Hotels
- Restaurants / Cafes
- Garages / Workshops
- Schools



D10LP

IMPORTANT

Always switch off the cleaner and remove the plug from the mains power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this Instruction manual.

PRECAUTIONARY MEASURES:



1. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, do not use the power cable, gently pull the plug from the power socket.



5. Do not use vacuum cleaner to pick up water or liquids.

SAFETY PRECAUTIONS & WARNINGS

IMPORTANT! Always switch off the cleaner and remove the power plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use. The power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

6. Do not unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. Do not pull or carry the appliance by the power cable, do not use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the mains power supply before connecting the hose to the unit.
16. Do not operate or use the appliance without the dust bag and/or filters in place.
17. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
18. If the air inlet, floor head or the telescopic tube are blocked, switch off the cleaner straight away and remove from the mains power. First clear the blocked object before attempting to start the vacuum cleaner again.
19. Hold the plug when rewinding onto the cord reel. To prevent accidental injury do not allow the plug to whip when rewinding.
20. Do not extend the power cable beyond the yellow mark.
21. Do not leave the appliance unattended when it is connected to a mains power supply.
22. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from the power supply.
23. Keep ends of the hose, telescopic tube and other openings away from your face and body.
24. Do not use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replaced immediately.
25. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
26. Never attempt to make any modifications electrically to the vacuum cleaner.
27. Always store the appliance indoors in a cool and dry place.
28. Do not pick up water. Dry household use only.
29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

KNOW YOUR PRODUCT

1. Carry Handle
2. On/Off Switch
3. Hose Inlet
4. Cloth Filter (Not Shown)
5. Tank
6. Handle
7. Hose
8. Three-Piece Metal Tube
9. Connection Latches (Not Shown)
10. Power Cable/Cord Restraint (Not Shown)
11. Wheels
12. Combination Floor Tool
13. 2-In-1 Cleaning Tool



ASSEMBLY AND USE

The cleaner should be switched off and disconnected from the mains power supply before you start to assemble.



1. Connect the 3-piece metal tube together.



2. Connect the handle to the tube.



3. Connect the tube to the combination floor tool or the crevice tool/dusting brush.



4. Disconnect latches on side of machine and remove the canister lid. Remove all accessories from inside the tank.



5. Fit the wheel cover to the wheel base by pushing down.



6. Fit the wheels to the base of the tank. Install the big wheels into the relevant positions and then fix with screws included. (Note wheels are marked "R" and "L" to help installation).



7. Fit the small wheels to the base of the tank by pushing down.



8. Replace the canister lid (with the power cord facing the opposite direction of the hose inlet) and connect the latches.



9. Insert the hose connector into the hose inlet and turn clockwise until it locks securely onto the machine.



10. This machine is equipped with a short cable and plug and a cord restraint. It needs to be used with an extension cord.



11. Connect extension cord to the Cable Restraint. Feed the loop up through Cable Restraint opening. Place extension cord over the top of the Cable Restraint hook. Pull down on the extension cord to lock the cord onto the hook.



12. Connect the extension cord to the mains power supply and start the cleaner by pressing the On/Off button.

NOTE: Always ensure that the cloth filter and the inlet filter are fitted in the cleaner before it is used.

ACCESSORIES

The combination floor tool is ideal for cleaning on carpets and hard floors.



Carpet



Hard Floors

Fitting the 2-in-1 Cleaning Tool

To fit the accessories to the tube, gently insert the tube into the top of the 2-in-1 Cleaning Tool.



2-in-1 Cleaning Tool

Ideal for cleaning furniture, curtains and upholstery

MAINTENANCE

ATTENTION: DISCONNECT FROM MAINS POWER SUPPLY BEFORE DOING ANY MAINTENANCE WORK.

If proper care is taken to maintain your cleaner, motor maintenance is unnecessary. However we recommend that your cleaner is serviced once a year.

Cleaning Filter and Tank



1. Release the connection latches to unlock the lid from the base.



2. Remove the cloth filter. Empty the tank and clean thoroughly.



3. Twist the locking knob with an anti-clockwise force to remove the inlet filter.

Note: Wash and clean the cloth filter using lukewarm water. Please ensure that the cloth filter is completely dry before refitting.



4. Refit the inlet filter and cloth filter.



5. Return the barrel to the tank and fasten connection latches.

SPARE PARTS

For customer service or product enquiries please contact 1800 815 270 (AUS) or 0800 282 288 (NZ).

Part	Part Number
Cloth Filter	33400184
Inlet Foam Filter	32200840
Hose Assembly with Handle	31220454
Rod 3pc Stainless Steel	31300568
Rear Wheel	33500394
Latch	33701753

TROUBLESHOOTING

Trouble	Possible Cause	Remedy
Suction weakens or cleaner runs hot	Clogged Filter	Brush dirt from filter. If condition continues, change filter.
	Air Leak	Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank lid is sealed properly.
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present.

3 MONTH WARRANTY

Your cleaner, in the case of domestic use, has a three month parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions. This cleaner is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand.

The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void. In the event of service or advice being needed, please contact Electrical Home-Aids Pty Limited, Building 3, Level 1, Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, on 1800 815 270 (AUS), 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole

discretion of Electrical Home-Aids Pty Limited.. If Electrical Home-Aids Pty Limited. decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Limited. is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Limited. will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

KEEP THIS GUARANTEE AND YOUR RECEIPT AS PROOF OF PURCHASE

PURCHASE DATE/...../.....

Our policy is one of continuous development and accordingly we reserve the right to change specifications without prior knowledge.

Electrical Home-Aids Pty Limited
Building 3, Level 1, Brandon Business Park,
530 Springvale Road, Glen Waverley Victoria 3150

1800 815 270 (AUS), 0800 282 288 (NZ), Monday-Friday 9am-5pm EST.