

WorkHero

**20L WET & DRY VACUUM
STAINLESS STEEL
1100W MAX**

Ideal for:

Motels/Hotels

Schools/Councils

Garages/Workshops



WD20LSS

IMPORTANT

Always switch off the cleaner and remove the plug from the mains power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. **Never operate the vacuum cleaner without filters.**

SAFETY PRECAUTIONS AND WARNING:

When using your vacuum cleaner, basic precautions should always be observed, including the followings;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, do not use the vacuum cleaner outdoors.
5. **Always** check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. **Do not** unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. **Do not** handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. **Do not** attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. **Do not** operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. **Do not** use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the main power supply before connecting the hose to the unit.
16. **Do not** operate or use the appliance within dust bag and/or filters in place.
17. Before vacuuming, remove any large or shaft objects from the floor or cleaning surface in order to prevent damage to the filter.
18. If the air inlet, floor head or the telescopic tube is blocked, switch off the cleaner straight away and remove from the main power. First clear the blocked object before attempting to start the cleaner vacuum again.
19. Hold the plug when rewinding onto the cord reel. To prevent accidental injury do not allow the plug to whip when rewinding.
20. **Do not** leave the appliance unattended when it is connected to a mains power supply
21. Before carry out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply
22. Keep ends of the hose, telescopic tube and other openings away from your face and body.

23. **Do not** use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replaced immediately.
24. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
25. **Never** attempt to make any modifications electrically to the vacuum cleaner.
26. **Always store the appliance indoors in a cool and dry place.**
27. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

BEFORE YOU BEGIN



1. Do not operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.





3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
5. If the air inlet or floor head or tube are blocked, you should switch off the cleaner straight away and remove from mains power. First clear the blocked substance before attempting to start the vacuum cleaner again.

KNOW YOUR PRODUCT

1. Handle
2. Hose
3. Carry Handle
4. On/Off Switch
5. Connection Latches
6. Tank
7. Hose Inlet
8. Tank Wheels
9. Combination Floor Tool
10. Two-piece Metal Tube
11. Crevice Tool
12. Dusting Brush
13. Wet Floor Tool

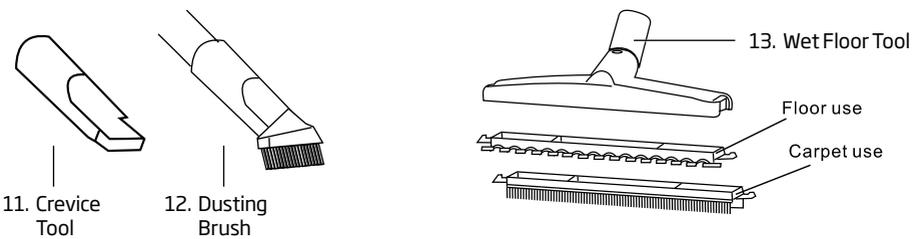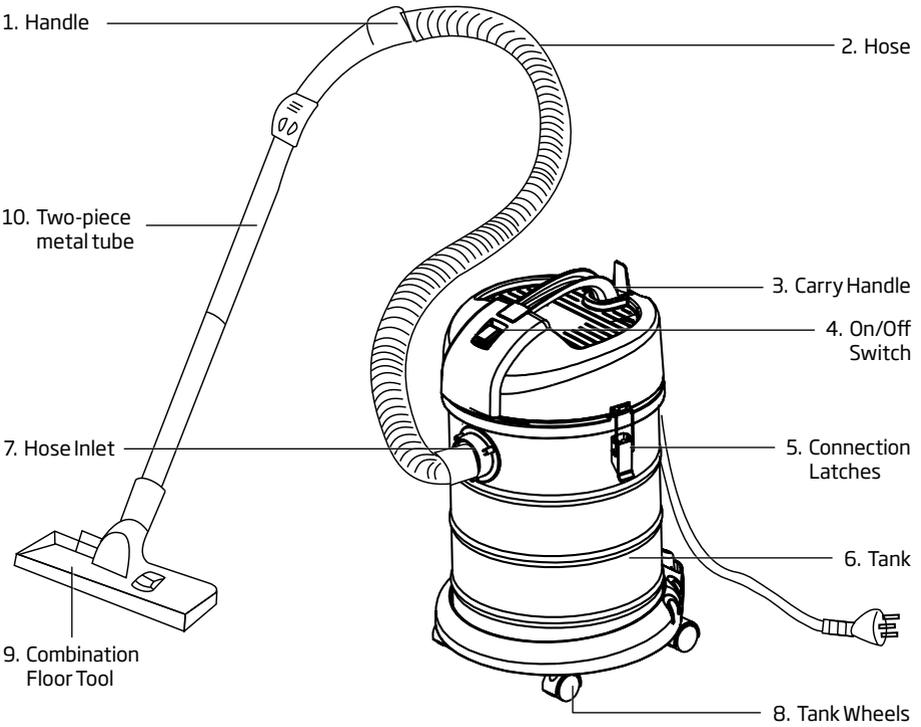


ASSEMBLY

The cleaner should be switched off and disconnected from the mains power supply before you start to assemble.


Part 1

1. Connect the 2-piece metal tube together.
2. Connect the handle on the hose to the tube.
3. Connect the tube to the combination floor tool or the wet pick up tool.

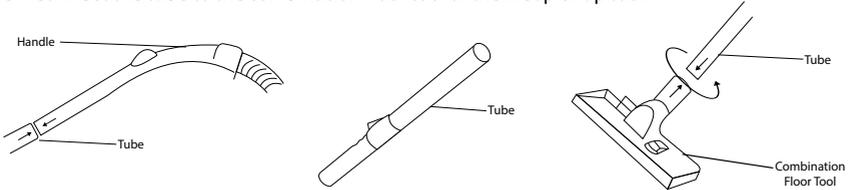


Part 2

1. Disconnect latches on side of machine and remove the canister lid.
2. Remove all accessories from inside the tank.
3. Fit the wheels to the base of the tank.
4. Replace the canister lid (with the power cord facing the opposite direction of the hose inlet) and connect the latches.

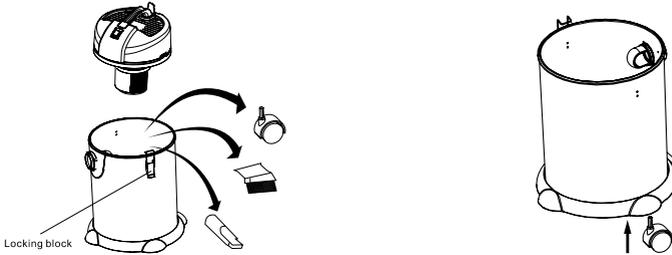


Part 3

1. Insert the hose connector into the hose inlet and turn clockwise until it locks securely onto the machine.
2. Take the cable from the storage area and connect to the mains power supply.
3. Start the cleaner by pressing the On/Off button.

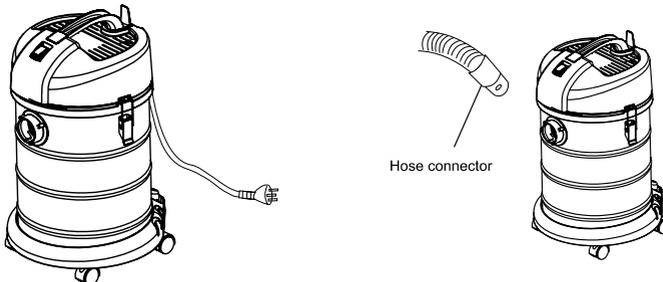


ACCESSORIES

The combination floor tool is ideal for cleaning on carpets and hard floors.

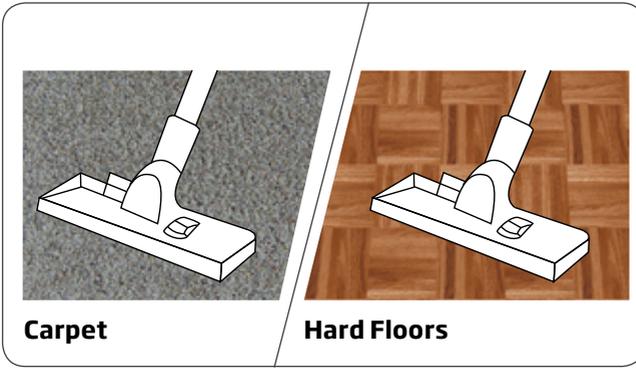

The wet pick up floor tool is ideal for wet applications.

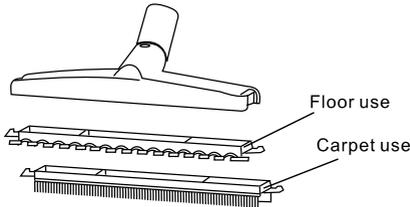


Fitting the dusting brush and crevice tool

To fit the accessories to the tube, gently insert the tube into the top of the dusting brush or crevice tool.

Dusting Brush - ideal for cleaning furniture, curtains and upholstery


Crevice Tool - ideal for cleaning in tight spaces

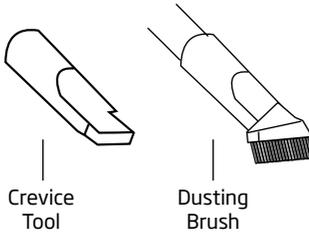

OPERATION

ATTENTION: DISCONNECT FROM MAINS POWER SUPPLY BEFORE DOING ANY MAINTENANCE WORK.

Dry Vacuum Cleaning

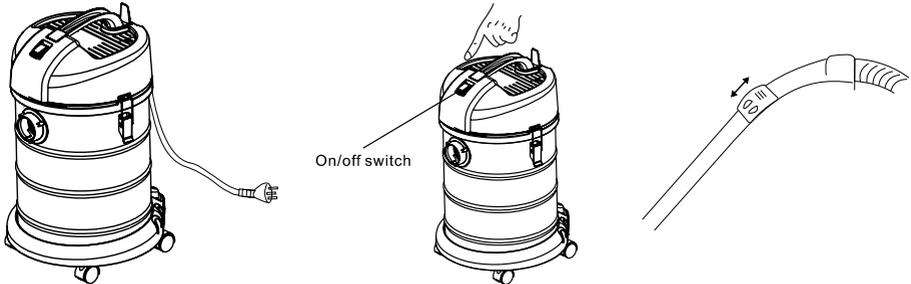

1. Ensure the HEPA Filter and mesh is always fitted before the cleaner is used.
2. This cleaner can be used with or without a dust bag.
3. If using a dust bag please ensure it is fitted properly before use.
4. Once the dust bag is full we recommend a new dust bag be fitted.

Wet Vacuum Cleaning

1. Ensure the HEPA Filter and mesh is fitted and the dust bag is removed before the cleaner is used.
2. Clean the tank after each use. Avoid leaving dust or dirty water in the tank.
3. Wipe the machine inside and out from time to time, using only luke warm water. Before use always examine the power cable for cuts and/or damage.
4. Wet pick up accessories should be washed periodically.

MAINTENANCE

If proper care is taken to maintain your cleaner, motor maintenance is unnecessary. However we recommend that your cleaner is serviced once a year.

 
Cleaning Filter



1. Remove the mesh from around the HEPA Filter.
2. Twist the locking knob with an anti-clockwise force to remove the filter.

MAINTENANCE (CONT.)

Cleaning Filter (cont.)




24hr



3. Wash and clean the HEPA Filter and mesh carefully using luke warm water.

4. Dry by airing.

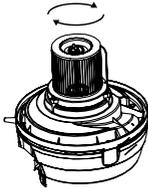

5. Place the filter and mesh back into the cleaner.

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Suction weakens or cleaner runs hot	Clogged filter	Brush dirt from filter. If condition continues, change filter.
	Air Leak	Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank cover is sealed properly.
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present.
Misting in the exhaust air	Saturated filter	Replace saturated filter with a dry filter.

CUSTOMER CARE

For customer service or product enquiries please contact 1800 815 270

PRODUCT NUMBER	PRODUCT DESCRIPTION
32200828	HEPA Filter cartridge/mesh
32440320	Dust Bags 5pk (non-woven)
31220454	Hose Assembly
31300562	2-piece Metal Tube
33500382	Replacement Wheel

3 Month WARRANTY

This is a parts and labour warranty against product defects and failures, when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions. This cleaner is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void. In the event of service or advice being needed, please contact International Cleaning Solutions Pty Ltd, ACN 119 462 798, Level 1, Building 2 Brandon Business Park, 530 Springvale Rd, Glen Waverley, VIC 3150. Customer Care: 1800 815 270.

The decision to repair or replace the cleaner is at the sole discretion of International Cleaning Solutions Pty Ltd. If International Cleaning Solutions Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

International Cleaning Solutions Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised International Cleaning Solutions Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, International Cleaning Solutions will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

Keep this Guarantee and your receipt as proof of purchase

Purchase Date/...../.....

Our policy is one of continuous development and accordingly we reserve the right to change specifications without prior knowledge.

International Cleaning Solutions Pty Ltd.

(ACN 119 462 798)

Level 1, Building 2, Brandon Business Park,
530 Springvale Road, Glen Waverley, Victoria, 3150.

WORK HERO 20L WET & DRY VACUUM STAINLESS STEEL 1100W MAX - WD20LSS 07

workHero

Product Code: 11500123

International Cleaning
Solutions Pty Ltd
(ACN 119 462 798)
Level 1, Building 2
Brandon Business Park
530 Springvale Rd
Glen Waverley, VIC 3150

Customer Care: 1800 815 270

Made in China

TECHNICAL INFORMATION

Model: WD20LSS
240V ~ 50Hz
1100W MAX

