




OPTIM[®]

STICKVAC

Cordless convenience to give you
the freedom to clean your home
quickly and easily.

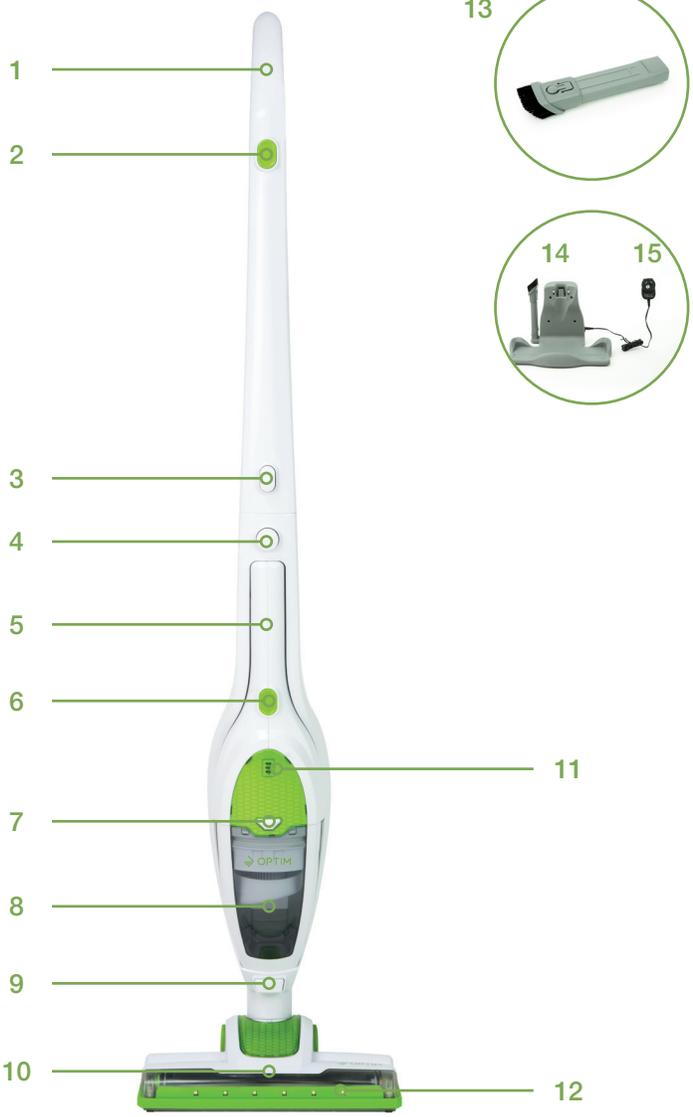

O2300 Stickvac

Congratulations on the purchase of your new Optim Stickvac. There are many useful features built into your stickvac. We recommend that you carefully read this instruction manual for the best results.

Features:

1. Handle
2. Stickvac On/Off Button
3. Handle Release Button
4. Handvac Release Button
5. Handvac
6. Handvac On/Off Button
7. Dust Bin Release Button
8. Dust Bin
9. Powerhead Release Button
10. Powerhead
11. Battery Indicator
12. LED Lights

Accessories:

13. 2-in-1 Cleaning Tool (Dusting Brush & Crevice Tool)
14. Charging Base
15. Charger

Specifications:

Voltage: 14.8V Lithium

Power: 90W (105W with the powerhead)

Weight: 2.07kg (0.96kg handvac only)

Run time: 16 minutes

Dust Bin Capacity: 450ml

Sound Level: 72 dbA

Please contact Godfreys Customer Care 1800 815 270 (AUS) or 0800 282 288 (NZ), to find your local spare parts provider.

Before You Begin

This cleaner must be operated in accordance with these instructions and only used for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring, walls and fabrics. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

PLEASE READ THESE INSTRUCTIONS THOROUGHLY.

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a handy place for future reference.

IMPORTANT

Always switch off the cleaner before cleaning, when not in use, attempting any maintenance task, fitting or removing accessories. The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be charged with the charger provided. This cleaner should only be used for its intended purpose as described in these instructions.

PRECAUTIONARY MEASURES:



1. Do not operate the vacuum cleaner too close to heaters, radiators, and other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When removing the power plug from the power supply, do not use the power cable, gently pull the power plug from the power supply.



5. Do not use this vacuum cleaner to pick-up water or liquids.



Safety Precautions & Warnings

IMPORTANT! Always switch off the appliance before cleaning, when not in use or attempting any maintenance task.

The charger must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. To prevent electrical shock, **do not** immerse the appliance, battery, or power plug into water or other liquids.
4. To prevent electrical shock, **do not** use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the power plug should be in a good condition and **must not** be damaged. If the power cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
6. The appliance and charging base are intended for domestic indoors use only.
7. **Do not** unplug by pulling on the power cord. To unplug, grasp the power plug, **not** the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
8. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the appliance over the power cable.

9. **Do not** handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. **Do not** attempt to change the attachments while the appliance is switched on. Use only manufacturer's recommended accessories.
12. **Do not** operate the vacuum cleaner too close to heaters, radiators and other hot surfaces.
13. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. **Do not** use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. **Never** operate or use the appliance without the filters in place.
16. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
17. If the air inlet or floor head is blocked, switch off the cleaner straight away. First, clear the blocked object before attempting to start the vacuum cleaner again.
18. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner.
19. Keep openings away from your face and body.
20. **Do not** use the vacuum cleaner if it is damaged or broken. If connection cables are damaged, have them replaced immediately.
21. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
22. **Never** attempt to make any modifications electrically to the vacuum cleaner and charging base.
23. Always store the appliance and charger indoors in a cool and dry place.
24. **Do not** pick up water, for dry household use only
25. Use the power head only for vacuuming dust and dry substances in the home.
26. **Never** run over the power cable with the power head as the cable could get damaged.
27. **Never** touch the roller brush while the vacuum cleaner is switched on.
28. To prevent unnecessary wear on the power head cleaning nozzle, keep it moving while in operation.



29. Damage caused by improper use or by not observing the instructions in this manual will void the warranty.

BATTERY USE AND CARE

1. The battery can only be replaced by a qualified technician. **Do not** try to open the cleaner to replace the battery. Failure to do so may cause risk of injury and fire.
2. The appliance is only to be used with the charging base uniquely provided with the appliance.
3. Only charge the battery inside the product and only use the specifically designated charger to charge the product.
4. When handvac is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the handvac terminals together may cause burns or a fire.
5. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes seek medical help. Liquid ejected from the battery may cause irritation or burns.
6. **Do not** charge or store the cleaner outdoors or inside the car. Only charge or store the battery or cleaner in a dry indoor area where the temperature is more than 5 °C but less than 45 °C.
7. Never attempt to open the battery for any reason. If the plastic housing of the cleaner breaks or cracks, immediately discontinue use and **do not** recharge.
8. The charging base and the charger are **not** a serviceable parts.
9. Before disposal of your battery, fully discharge your battery by running the product until it stops.
10. The cleaner contains a Lithium battery. **Do not** dispose the cleaner with your local garbage. Contact your local council for the instruction of disposal of the battery.
11. Do not use the charger to charge a non-chargeable battery.

Assembly

IMPORTANT! Always ensure that the cleaner is turned off before fitting or removing accessories.

ASSEMBLY



1. Place the powerhead onto the floor and insert the main body into the powerhead as shown.



2. Lift the handle upwards until it clicks into position.
Note: The handle can be folded by pressing the Handle Release Button and folding the handle backwards.



3. Insert the handvac into the main body until it clicks into place.



Instructions for Use

WARNING! The charger has been specially designed to charge the Optim Stickvac. Do not use any other charger.

CHARGING



1. Plug the charger into the charging base socket then place the cleaner onto the charging base.



2. When the battery indicator lights are flashing green, the vacuum cleaner is charging. When the battery indicator lights turn off, the cleaner is fully charged.

NOTE: When the battery indicator light is flashing green during use, it means that the battery requires charging. As a safety precaution, the cleaner cannot be switched on while the vacuum is charging.

CAUTION! Do not attempt to open and repair the battery.

NOTE: The cleaner may not begin charging as soon as the cleaner is placed onto the charging base. This is due to the overheating protection feature. The cleaner can take up to 15 minutes before the cleaner begins charging.

USING THE STICKVAC



1. Unlock the stickvac by placing one foot onto the powerhead and tilting the handle backwards.
2. Press the Stickvac On/Off Button to turn on the stickvac.

USING THE HANDVAC



1. Remove the handvac from the main body by pressing the Handvac Release Button.
2. Press the Handvac On/Off Button to switch on the handvac.
3. The 2-in-1 Cleaning Tool can be connected to the handvac for above the ground cleaning or for cleaning hard to reach areas.

USING THE 2-IN-1 CLEANING TOOL



IMPORTANT! Always ensure that the cleaner is turned off before fitting or removing accessories.

1. The 2-in-1 Cleaning Tool can be used as a crevice tool for cleaning hard to reach places or as a dusting brush for cleaning benchtops, bookshelves etc.
2. The 2-in-1 Cleaning Tool can be stored onto the Charging Base.



Maintenance

IMPORTANT! Always ensure that the cleaner is turned off before performing any maintenance.

EMPTYING THE DUST BIN



1. Detach the handvac from the main body by pressing the Handvac Release Button.



2. Press the Dust Bin Release Button to access the dust bin.



3. To empty the dust bin, remove the filter and filter cone by pulling on the filter tabs.



3. To clean the filter, separate the filter from the filter cone as shown. It is recommended to replace the filter every 6 months to maintain the filtration and cleaning performance of the cleaner.

The filter cone can be disassembled and cleaned by twisting and separating the lower and upper parts of the filter cone.

FILTER ASSEMBLY



1. Reinsert the filter and filter cone into the dust bin ensuring that the filter cone is connected to the air inlet as shown.



CLEANING OR REPLACING THE BRUSH ROLL

IMPORTANT! Always ensure that the cleaner is turned off before performing any maintenance.



1. Detach the powerhead from the main body by pressing the Powerhead Release Button. Using a coin or a screwdriver turn the brush roll locking tab to the Unlock symbol to access the brush roll.



2. If a build-up of debris is wound around the brush roll, remove by carefully cutting with a scissors. Avoid damaging or cutting the bristles.
3. To reinsert the brush roll insert the left side of the brush roll, then insert the right side into the powerhead and turn the brush roll locking tab to the Lock symbol.

Troubleshooting

PROBLEMS AND SOLUTIONS

If you come across a problem, please use the checklist of troubleshooting tips before contacting Optim Customer Care: 1800 815 270 (AUS) or 0800 282 288 (NZ).

FAULT	CAUSE	SOLUTION
Cleaner will not switch on / Power indicator flashes green	Flat battery	Place the cleaner onto the charging base for charging
The cleaner can't be charged	The cleaner is not placed properly onto the charging base The charging base is disconnected from the power supply	Place the cleaner onto the charging base Plug the power plug into a power socket Connect the charging cable to the charging base
Reduced suction	Dust bin filter is not installed Dust bin is full of dust Dust bin filter requires cleaning or replacing	Reinstall the filter Empty the dust bin Clean or replace the filter
Dust bin can't be reinstalled	The filter and filter cone are not installed properly	Reinstall the filter and filter cone as per the instructions in this manual
Roller brush does not spin	The roller brush is blocked	Take out the roller brush from the power head and remove any hair from the roller brush Remove and reinstall the powerhead firmly into the cleaner



Spare Parts

Please contact Optim Customer Care: 1800 815 270 (AUS) or 0800 282 288 (NZ) to find your local spare parts provider.

Dust Bin Filter	32201557
Charging Base	33201563
Charger	33201565
Brush Roll	33788097



STICKVAC

Conditions of warranty

Your Optim cleaner, in the case of domestic use, has a 1 year parts and labour warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, Building 3 Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270 (AUS) or 0800 282 288 (NZ), Monday-Friday 9am-5pm EST. The decision to repair or replace the cleaner is at the sole discretion of Electrical

Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Optim Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.

The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."